



ABOUT THE Z CLIP KIT

The Z Clip Kits are the perfect solution for construction professionals, DIY projects and prosumer applications. They come pre-packaged in a variety of rail lengths, Z Clips and mounting hardware. The Z Clip kits are available in MF375 and MF625 versions.

The Z Clips and rails are made of aluminum and the Z Clip features a stock clip size length of 1 1/2" for the MF625 kits and 2" for the MF375 kits, as well as continuous lengths (rails) in 12", 24", 36" and 48" options. The MF625 Z Clips provide 3/16" projection and 5/8" lift off, and MF375 Z Clips provide 1/4" projection and 3/8" lift off.




WATCH OUR INSTALLATION VIDEO

Scan QR code for full video instructions or visit www.monarchmetal.com/videos

WHAT'S INCLUDED


Kit	Clips	Rails	#8 x 1/2" Screws	#8 x 3/4" Screws	#8 Drywall Anchors w/ 1" Screws
12 inch	4	2	8	8	4
24 inch	4	2	8	8	6
36 inch	6	2	12	12	8
48 inch	8	2	16	16	10

REQUIRED TOOLS AND EQUIPMENT

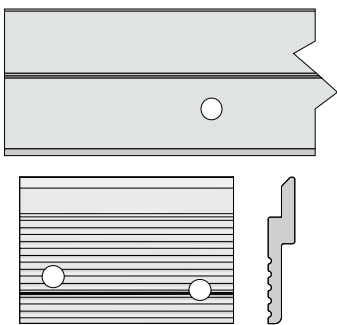


CLIPS & RAILS

Kits include clips and rails of MF375 or MF625 and are available in 12", 24", 36" and 48" options.

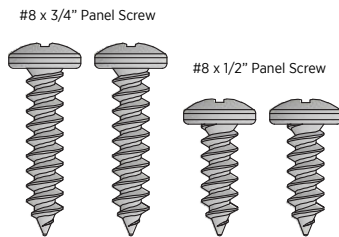


PANEL SCREWS

Kits include #8 x 1/2" Panel Screws, #8 x 3/4" Panel Screws and #8 x 1" Drywall Screws

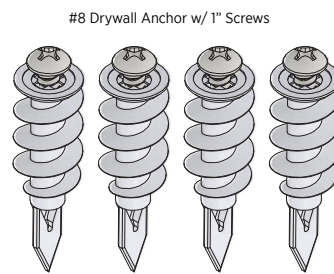

DRYWALL ANCHORS

Kits include drywall anchors. These are required if you are not mounting directly into studs. Best installation is into structural studs.

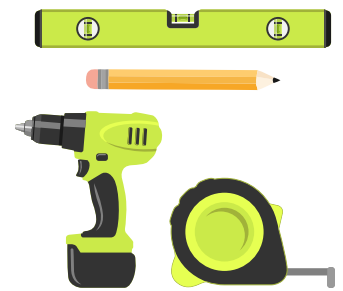


TOOLS

Power drill, tape measure, level tool, stud finder and a pencil is recommended for the most precise installation.



Z CLIP KIT INSTALLATION GUIDE

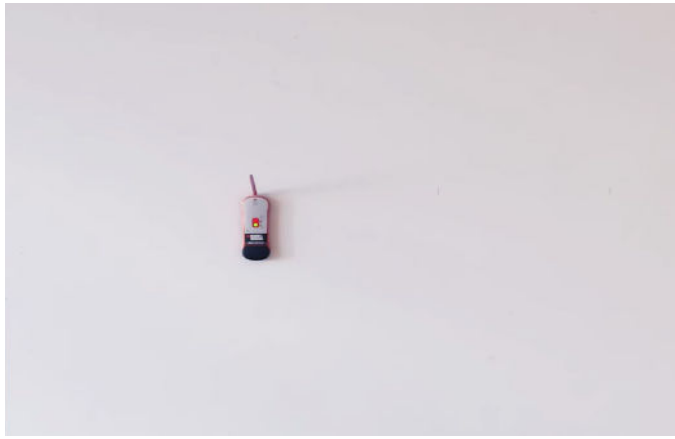

1 | PREP YOUR SURFACE & FIND YOUR STUDS

Make sure the surface where you plan to install the Z Clip rails is clean, flat, and easy to access. Lightly mark the desired top height location of your object with a pencil. Make a second mark 2" (for MF375 kits) or 2 1/4" (for MF625 kits) below your first mark, this mark will be lined up with the top of the upper rail when installed.

Using a stud finder, find a stud near the center of your installation area. Depending on your framing, you may have studs every 16-24". Use a pencil, and mark the studs on both sides of your center-marked stud.

2 | SECURE THE TOP Z CLIP RAIL

Use a level to make sure the Z Clip rail is perfectly horizontal. Secure the top Z Clip rail to the wall with the 1" screws. If the studs are not located in this area of installation, use the supplied drywall anchors along with the 1" screws.

Note: You can drill small pilot holes to help install screws into the studs.



3 | ATTACH YOUR Z CLIPS


Attach the Z Clips to the back of the item you are hanging by using the appropriate length screws, so that it doesn't penetrate/damage your item (1/2" and 3/4" screws are provided). Locate the Z Clips towards each end but not exceeding the length of the Z Clip rail and 1" down from the top of your item. Attach the lower Z Clips in the same manner 3 1/2" from the bottom edge of your item.

Note: Make sure the screws are tight but be careful not to over-tighten them.

4 | SECURE THE BOTTOM Z CLIP RAIL

Measure the vertical distance from the top of the upper to the top of the lower Z Clips. This measurement is the exact placement that the lower rail needs to be installed on the wall below the top rail.

Your Z Clips have been successfully installed. Carefully install your item onto the wall and make sure all Z Clips fully engage with the rails on the wall.

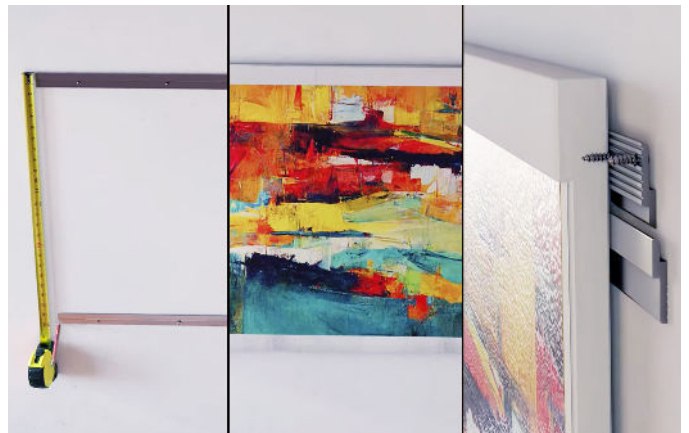

(631) 750-3000