



## ABOUT THE MFTAPE-S KIT

The MFTAPE-S Kits are the perfect solution for construction professionals, DIY projects and prosumer applications. They can be used to hang painted or unpainted glass panels, phenolic, ACM, and aluminum panels. They come pre-packaged in a variety of MF375 Z Clip rail lengths, MFTAPE-S rails and mounting hardware.

The MFTAPE-S rails and MF375 rails are made of 6063-T6 aluminum, and provides a 0.293 inch projection and 3/8 inch lift off. The MFTAPE-S contains 1 strip of 3M VHB tape pre-applied for peel and stick application. The kits are offered in 12", 24", 36" and 48" options.




### WATCH OUR INSTALLATION VIDEO

Scan QR code for full video instructions or visit [www.monarchmetal.com/videos](http://www.monarchmetal.com/videos)

## WHAT'S INCLUDED


Kit	MF375 Rails	MFTAPE-S Rails	#8 Drywall Anchors w/ 1" Screws
12 inch	2	2	4
24 inch	2	2	6
36 inch	2	2	8
48 inch	2	2	10

## REQUIRED TOOLS AND EQUIPMENT

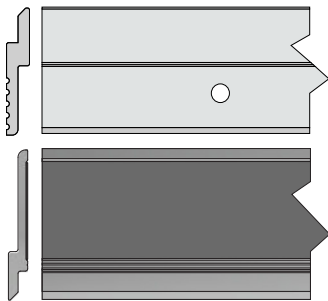


### RAILS

Kits include two rails of MF375 & MFTAPE-S and are available in 12", 24", 36" and 48" options.

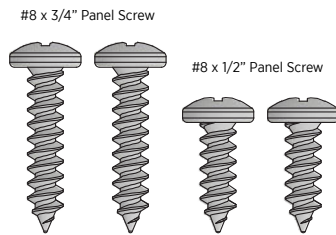

### SCREWS

Kits include #8 x 1/2" Panel Screws, #8 x 3/4" Panel Screws and #8 x 1" Drywall Screws

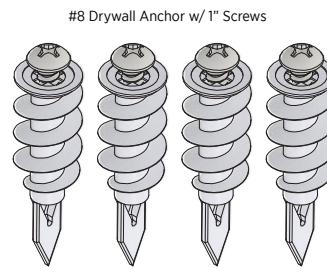

### DRYWALL ANCHORS

Kits include drywall anchors. These are required if you are not mounting directly into studs. Best installation is into structural studs.



### TOOLS

Power drill, tape measure, level tool, stud finder and a pencil is recommended for the most precise installation.



# MFTAPE-S KIT INSTALLATION GUIDE



## 1 | PREP YOUR SURFACE & FIND YOUR STUDS

Make sure the surface where you plan to install your MFTAPE-S kit is clean, flat, and easy to access. Lightly mark the desired top height location of your object with a pencil. Make a second mark  $2\frac{1}{2}$ " below your first mark this mark will be lined up with the top of the upper rail when installed.

Using a stud finder, find a stud near the center of your installation area. Depending on your framing, you may have studs every 16"-24". Use a pencil, and mark the studs on both sides of your center-marked stud.

## 2 | SECURE THE TOP Z CLIP RAIL

Use a level to make sure the Z Clip rail is installed straight. Then, secure the top Z Clip rail to the wall with the 1" screws.

If the studs are not located in this area of installation, use the supplied drywall anchors along with the 1" screws.

**Note:** You can drill small pilot holes to help install screws into the studs.



## 3 | ATTACH YOUR MFTAPE-S RAILS

Next, without removing the adhesive cover of your MFTAPE-S rails, place and mark the rails 1" down from the top of your item and  $3\frac{1}{2}$ " from the bottom edge of your item.

Then, attach the MFTAPE-S rails to the back of the item you are hanging by removing the plastic cover of the double sided tape

**Note:** Prep the surface of your object with 70% isopropyl alcohol with 30% water.

## 4 | SECURE THE BOTTOM Z CLIP RAIL

Measure the vertical distance from the top of the upper MFTAPE-S rail to the top of your lower MFTAPE-S rail on your object. This measurement is the exact distance of the top edge of the top Z Clip rail to the top edge of the bottom Z Clip rail.

Your MFTAPE-S kit has been successfully installed. Carefully install your item onto the wall and make sure all MFTAPE-S and Z Clip rails fully engage with the rails on the wall.



**(631) 750-3000**